

Q5. How does one get a Gemini 15 printer to print in enhanced and bold mode?

A5. This procedure varies with every printer and program. The common thread is that the program you are using must have the capacity to send special codes "Escape Sequences" to the printer. The exact definition of what sequences your printer need is in your printer manual. Some programs (like 3EZPieces in the DP and SS modes or Visicalc) send them as ESCAPE Q (condensed mode on a ProWriter printer), while Word Juggler wants to see ESCAPE p (printer control) followed by the hexadecimal code for ESC Q, which is \$1B\$51. One cannot send the printer control codes in Word Processing in 3EZPieces (if the default ones accessed by Open Apple O do not work on your printer), but you can send them in the Spreadsheet mode and as long as you do not turn the printer off or send an over-riding command, it will continue to use the enhancement or pitch you have previously selected.