

Q2. My serial printer does not work, how do I know if I have the correct driver.

A2. The most common name for your printer driver, serial or parallel, is .PRINTER. To look at the driver, boot System Utilities, go to the System Configuration Program and Read the SOS.DRIVER file on the boot disk of the program that will not print. After Read(ing) the file, Edit the .PRINTER driver. A serial driver will have "n/a" in 3-Slot Number and will probably have a line under 4-Comment "Serial Printer Driver". If you find you do have a serial driver and it still will not print or just prints garbage, then go to 5-Configuration Block data and make sure these parameters are correct. There is a good section in the owners manual on how to edit this block for the various printer speeds. Most printers are 1200 baud.